


AR-F01



|         |         |
|---------|---------|
| English | P1-P5   |
| 日本語     | P6-P10  |
| 中文      | P11-P16 |


Necklace:  
Tie the fan lanyard hole with a lanyard; the lanyard can be adjusted to free your hands and keep you cool during travel and after work.

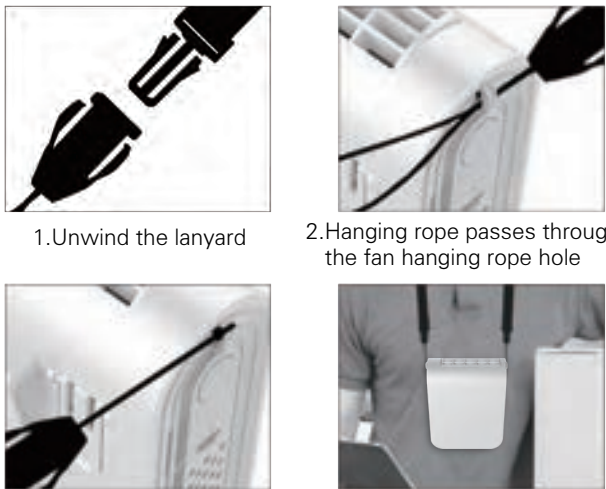

Portable Fan  
User Manual

Read this instruction carefully and keep it carefully before use

Product Introduction

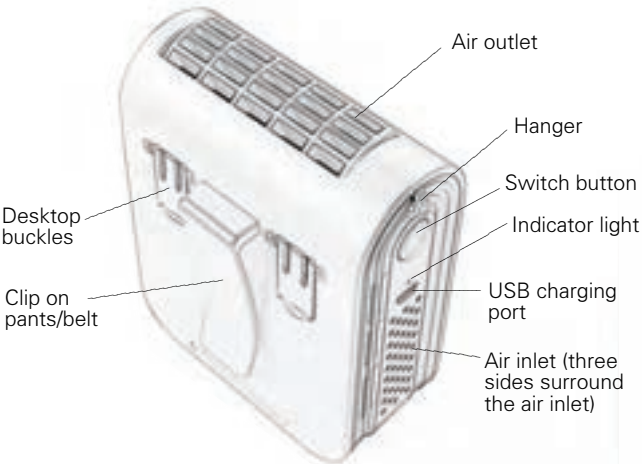

Matters Needing Attention

1. Tell children under 10 not to put their hands in the fan to avoid scratches when using it;
2. When the fan power is too low, the fan speed will be lower to protect the fan and battery;
3. Do not put any foreign objects into the fan;
4. If you do not use the fan for a long time, make sure that the battery is fully charged, pack the fan in a plastic bag and store it in a dry and cool place, otherwise the battery may not be charged;
5. It is forbidden to use the product at a temperature higher than 60 degrees C;
6. It is forbidden to discard this product at will or throw it into fire or high temperature environment, otherwise it will cause environmental pollution or even explosion.

Quality Assurance Information

In order to provide you with a better service and shopping experience, consumers purchase products through legal channels. From the date of purchase, if there is any non-human cause failure, we will provide one-year warranty (excluding man-made damage, disassembly and burning, water intake, breakage, etc.).

Product Parameters

|                        |                                 |
|------------------------|---------------------------------|
| Product Model          | AR-F01                          |
| Battery Specifications | 3600mAh polymer lithium battery |
| Charging Time          | 3.5 hours                       |
| Usage Time             | 3.5-12 hours                    |
| Product Dimensions     | 105*84*40mm                     |
| Speed                  | 3 Switches                      |
| Charging Input         | DC5V,2A                         |
| Noise                  | Less than 53db                  |

Packaging List


Note: If any missing accessories are found, please contact the seller.

|                    |   |
|--------------------|---|
| Fan                | 1 |
| USB charging cable | 1 |
| Hanging rope       | 1 |
| Instructions       | 1 |

携帯ファン  
取扱説明書

ご使用前に、この説明書をよくお読みになり、大切に保管してください

商品の紹介

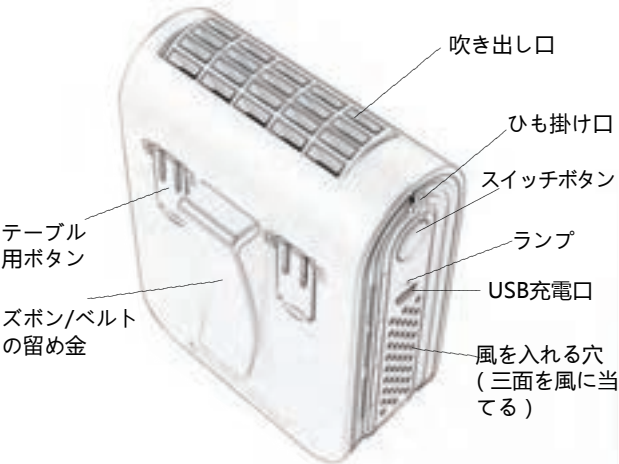

Rotation Speed-Usage Time

| Gear             | Speed   | Usage Time |
|------------------|---------|------------|
| Level 1 (Low)    | 2600RPM | 12 hours   |
| Level 2 (Medium) | 3300RPM | 6 hours    |
| Level 3 (High)   | 4200RPM | 3.5 hours  |

Charge

Insert the Miro USB charging cable supplied by the fan into the Micro USB port of the fan. The USB port can be inserted into the mobile phone adapter, computer USB socket, mobile power supply, etc.  
Indicator light: The red light flashes when charging;After charging, the blue light is always on;The blue light is always on when in use, and the blue light flashes when the battery is low.

Usage Method

Waist:  
Just clip the pants/belt with the big clip (cover the fan with clothes and use it as well).



製品パラメータ

|         |                  |
|---------|------------------|
| 製品の種類   | AR-F01           |
| バッテリー仕様 | 3600mAh高分子リチウム電池 |
| 充電時間    | 3.5 時間           |
| 使用時間    | 3.5-12 時間        |
| 製品サイズ   | 105*84*40mm      |
| ランク     | 3段切り替え           |
| 充電入力    | DC5V,2A          |
| 騒音      | ≤53db            |

包装リスト

注：もし部品の欠落が見つかったら、売り手に連絡してください。

|           |   |
|-----------|---|
| 扇風機       | 1 |
| USB充電ケーブル | 1 |
| 縄をかける     | 1 |
| 説明書       | 1 |

回転速度&使用時間

| ランク     | 回転速度    | 使用時間   |
|---------|---------|--------|
| 1段（下位）  | 2600RPM | 12 時間  |
| 2段（ミドル） | 3300RPM | 6 時間   |
| 3段（高級）  | 4200RPM | 3.5 時間 |

充電する

ファンに付属のMicro USB充電ケーブルをファンのMicro USBポートに挿入し、USBポートは携帯電話のアダプタ、パソコンのUSBジャック、モバイル電源などに挿入することができます。赤いランプが点滅すると充電します。電気が充滿した後、青色のランプが常に点灯します。使用時は青ランプが常に点灯し、電氣量が低い時は青ランプが点滅します。

使い方

腰を下げる:

大きなボタンでズボン/ベルトを挟めばいいです。（服で扇風機を全部覆い隠しても使えません。）



— 8 —

产品参数

|      |                |
|------|----------------|
| 产品型号 | AR-F01         |
| 电池规格 | 3600mAh 聚合物锂电池 |
| 充电时间 | 3.5小时          |
| 使用时间 | 3.5-12小时       |
| 产品尺寸 | 105*84*40mm    |
| 档位   | 3档切换           |
| 充电输入 | DC5V,2A        |
| 噪音   | ≤53db          |

包装清单


注：如果发现有任何配件缺失，请联系卖方

|        |   |
|--------|---|
| 风扇     | 1 |
| USB充电线 | 1 |
| 挂绳     | 1 |
| 说明书    | 1 |

— 12 —

首を付ける:

用扇风机的吊绳の穴をひもで結びます。ひもは調節できます。両手を解放します。旅行、退勤の途中で一緒に涼しいです。

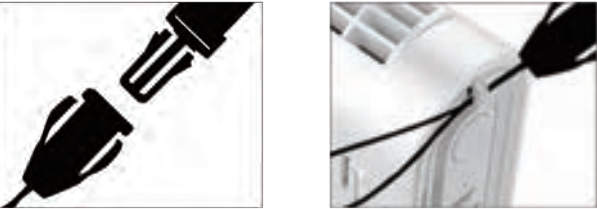

1.ひもをほぐす

2.ストラップは扇風機のコード穴を通ります



3.ロープを掛ける

4.上記の手順でもう一つのロープを通して使用できます

— 9 —

转速&使用时间

| 档位     | 转速      | 使用时间  |
|--------|---------|-------|
| 1档（低档） | 2600RPM | 12小时  |
| 2档（中档） | 3300RPM | 6小时   |
| 3档（高档） | 4200RPM | 3.5小时 |

充电

将风扇附赠的充电线插入到风扇的Micro USB端口，USB端口可插入手机适配头、电脑USB插口、移动电源等。指示灯：充电时为红灯闪烁，充满电为蓝灯，使用时为蓝灯常亮，当电池低电时蓝灯闪烁。

使用方法

挂腰:

用大夹扣夹住裤子/皮带即可（用衣服将风扇全部盖住也不影响使用）



— 13 —

注意事項

- 10歳以下の子供は扇風機に手を入れないようにしてください。傷を負わないようにしてください。
- ファンの電氣量が低すぎると、風速が低くなります。ファンと電池を保護します。
- ファンの中に異物を入れないでください。
- 本扇風機を使わない場合、必ず電池を充電し、扇風機をビニール袋に入れて、乾燥した涼しいところに密封して保管してください。電池が充電できない場合があります。
- 60°C以上の環境での本製品の使用を禁止する。
- 本製品を勝手に廃棄してはいけません。火や高温環境に投げ込むことは禁止されています。そうでないと環境汚染や爆発の原因になります。


品質保証情報

より良いサービスとショッピング体験を提供するために、消費者が合法的なルートで購入した製品は、購入日から非人間的な原因による故障が発生した場合、一年間品質保証を提供します。

— 10 —

挂脖:

用挂绳系上风扇挂绳孔；挂绳可调节，解放您的双手，旅行、下班途中一路清凉

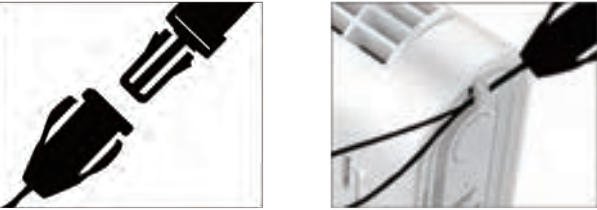

1.解开挂绳

2.挂绳穿过风扇挂绳孔



3.系上挂绳


4.按以上步骤穿入另一根挂绳，即可使用

— 14 —

隨身風扇  
使用说明书

使用前，请认真阅读并妥善保管此说明书

产品介绍

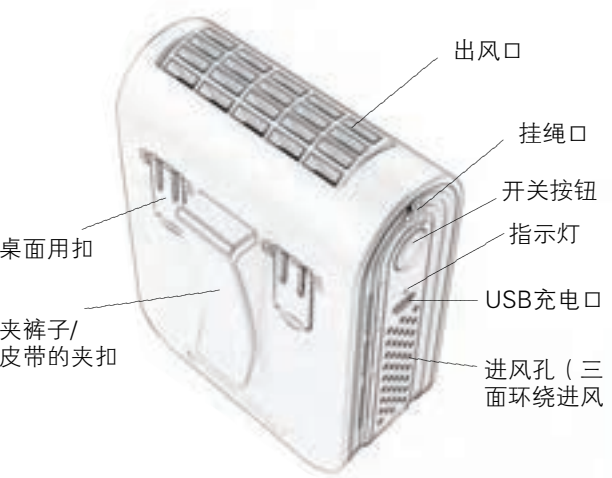

— 11 —

注意事项

- 10岁以下小孩使用请告知不要将手伸进风扇内，以免划伤；
- 当风扇电量过低，风速会变低进行保护风扇和电池；
- 请勿把任何异物放进风扇内；
- 如长期不用本风扇，务必把电池充满电，把风扇用塑料袋装好，密封贮存于干燥阴凉地方，否则可能导致电池无法充电的情况；
- 禁止在高于60°C环境下使用本产品；
- 禁止将本产品随意丢弃，禁止丢进火中和高温环境，否则会造成环境污染甚至爆炸。

质保信息

为了给您提供更好的服务和购物体验，消费者通过合法渠道购买的产品，自购买日期起，如果出现非人为原因造成的故障，我们都会提供一年质保（质保范围不包括人为损坏、拆卸燃烧、进水、摔坏等）。

— 15 —